


Wymiar Dimension	Symbol	TYP / TYPE										
		RV25	RV30	RV40	RV50	RV63	RV75	RV90	RV110	RV130	RV150	RV185
Wymiary przekładni  drive dimensions	A (h13)	35	40	50	60	72	86	103	127,5	147,5	170	207
	a	25	30	40	50	63	75	90	110	130	150	185
	a1	5	5,5	6,5	7	8	10	11	15	15	18	25
	a2	21	28	35,5	42,5	51,5	56,5	65	71	77,5	92,5	110
	a6	≤ 45	≤ 54	≤ 62	≤ 90	≤ 106	≤ 121	≤ 138	≤ 159	≤ 179	≤ 212	≤ 247
	a7	45	54,5	67	90	82	111	111	139	151,5	155	190
	a8	83	97	121,5	144	174	205	238	295	335	400	472
	a9	70	80	101	121,5	147,5	174	208	252,5	292,5	340	412
	a10	22	32	43	49	67	72	72	79	74	86	90
	a11	42	56	71	85	103	113	130	142	155	185	220
	a12	Wymiar zależny od wielkości silnika / depends on motor size										
	Ø a13											

### WYMIARY MOCOWANIA NA ŁAPACH FOOT MOUNTING DIMENSIONS

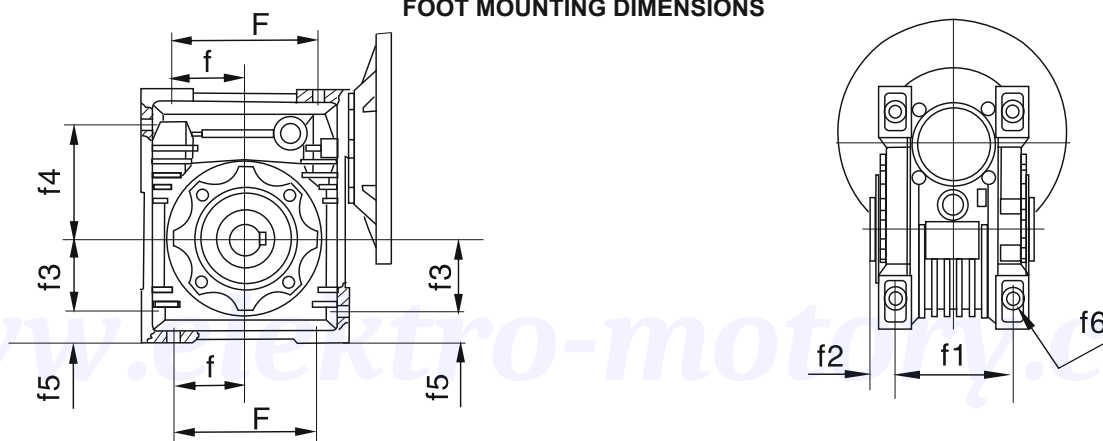

Wymiar Dimension	Symbol	TYP / TYPE										
		RV25	RV30	RV40	RV50	RV63	RV75	RV90	RV110	RV130	RV150	RV185
Wymiary mocowania na łapach  foot mounting dimensions	F	45	54	70	80	100	120	140	170	200	240	310
	f	22,5	27	35	40	50	60	70	85	100	120	155
	f1	34	44	60	70	85	90	100	115	120	145	175
	f2	8	9,5	9	11	13,5	15	20	20	25	27,5	32,5
	f3	22,5	27	35	40	50	60	70	85	100	120	155
	f4	35,5	44	55	64	80	93	102	125	140	180	213
	f5	12,5	13	15	20	22	26	33	42,5	47,5	50	52
	f6	14-Ø6	14-Ø6,5	14-Ø6,5	14-Ø8,5	14-Ø8,5	14-Ø11	14-Ø13	14-Ø14	14-Ø16	14-Ø18	14-Ø22